brother

Information for compliance with Commission Regulation 801/2013

Model Name: PJ-673

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB Port1	2.0W	0.3W	0min	10min
Wi-Fi	3.0W	0.3W	0min	10min
All network ports activated and connected	3.0W	0.3W	0min	10min

How to enable/disable Wireless LAN

To activate the wireless function:

- fTurn on the printer, and then hold down the () (Power) button for at least 3 seconds.
- ②1Check that the WIRELESS LAN indicator switches either from lit to blinking, or from blinking to lit, and then release the ⊕ (Power) button.

To deactivate the wireless function:

Hold down the (1) (Power) button for at least 3 seconds.